




BELLARINE WORMS

TIERED WORM FARM SET-UP GUIDE

(Follow this Set-Up Guide by working up from bottom of page)

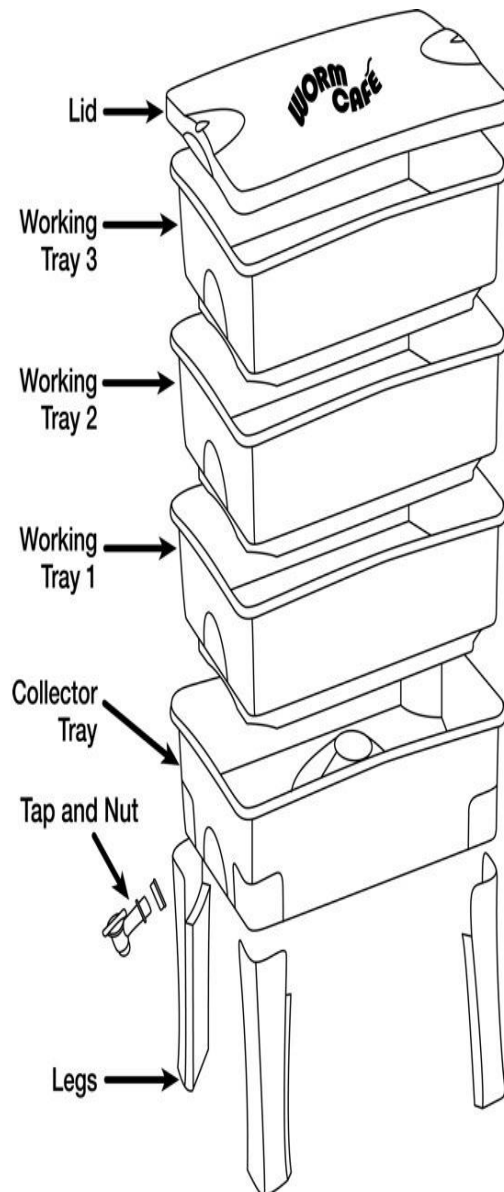

10/ Refer to Day to Day Compost Worm Care guide

9/ Working tray 3 is not required at this time

Working Tray 3

8/ Install lid and you're ready to start worm farming

7/ Install pre-soaked and gently wrung out worm farm blanket

6/ Install damp newspaper layers as per step 2 directly to bottom of working tray 2

5/ Refer to note below

Install Working Tray 2

Note: Overfill working tray 1 by approx 20mm so working tray 2 is resting hard on working tray 1 bedding and worms

4/ Add your box of worms - spread evenly

3/ Squeezing out excess moisture add combined and pre-soaked shredded cardboard and coco coir peat bedding materials - spread evenly

2/ Neatly install a damp newspaper layer x3 sheets thick bringing up the sides approx 50mm

Install Working Tray 1

1/ Leave tap in the open position with a weighted container underneath so to monitor liquid leachate run-off

NOTE:

1/ We recommend you 1st read Bellarine Worms "A Beginners Guide to Worm Farming" as a general introduction.

2/ Once you have decided what worm farm design suites your needs best, assemble and refer to the BW Set-Up Guide above working from the bottom up as illustrated.